

ELAC

ELAC ELECTROACUSTIC GMBH
FRAUNHOFERSTRASSE 16
D-24118 KIEL, GERMANY

Adsum

ADSUM
61 GREENPOINT AVE. SUITE 103
BROOKLYN, NY, 11222 USA

DEBUT CONNEX SERIES

Design by :
Model :

ELAC + ADSUM
DCB41-DS


OWNER'S MANUAL



Designer Series



Contents

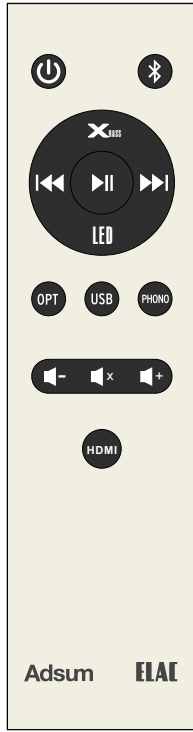


Remote Control




Batteries x 2




Stand x 2

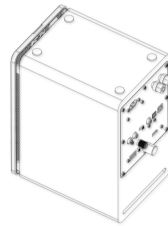


Rubber Foot x 4

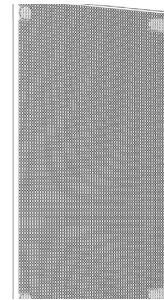


Grille x 2

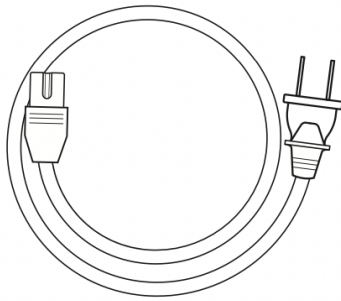

Power Cord

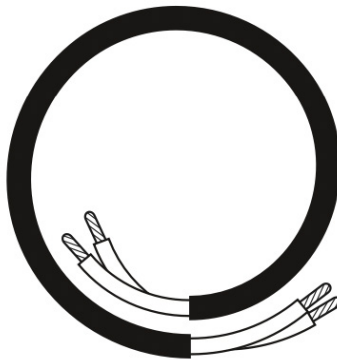


Speaker Cable

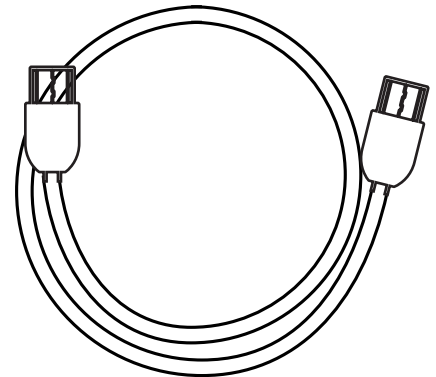


HDMI Cable

Connections

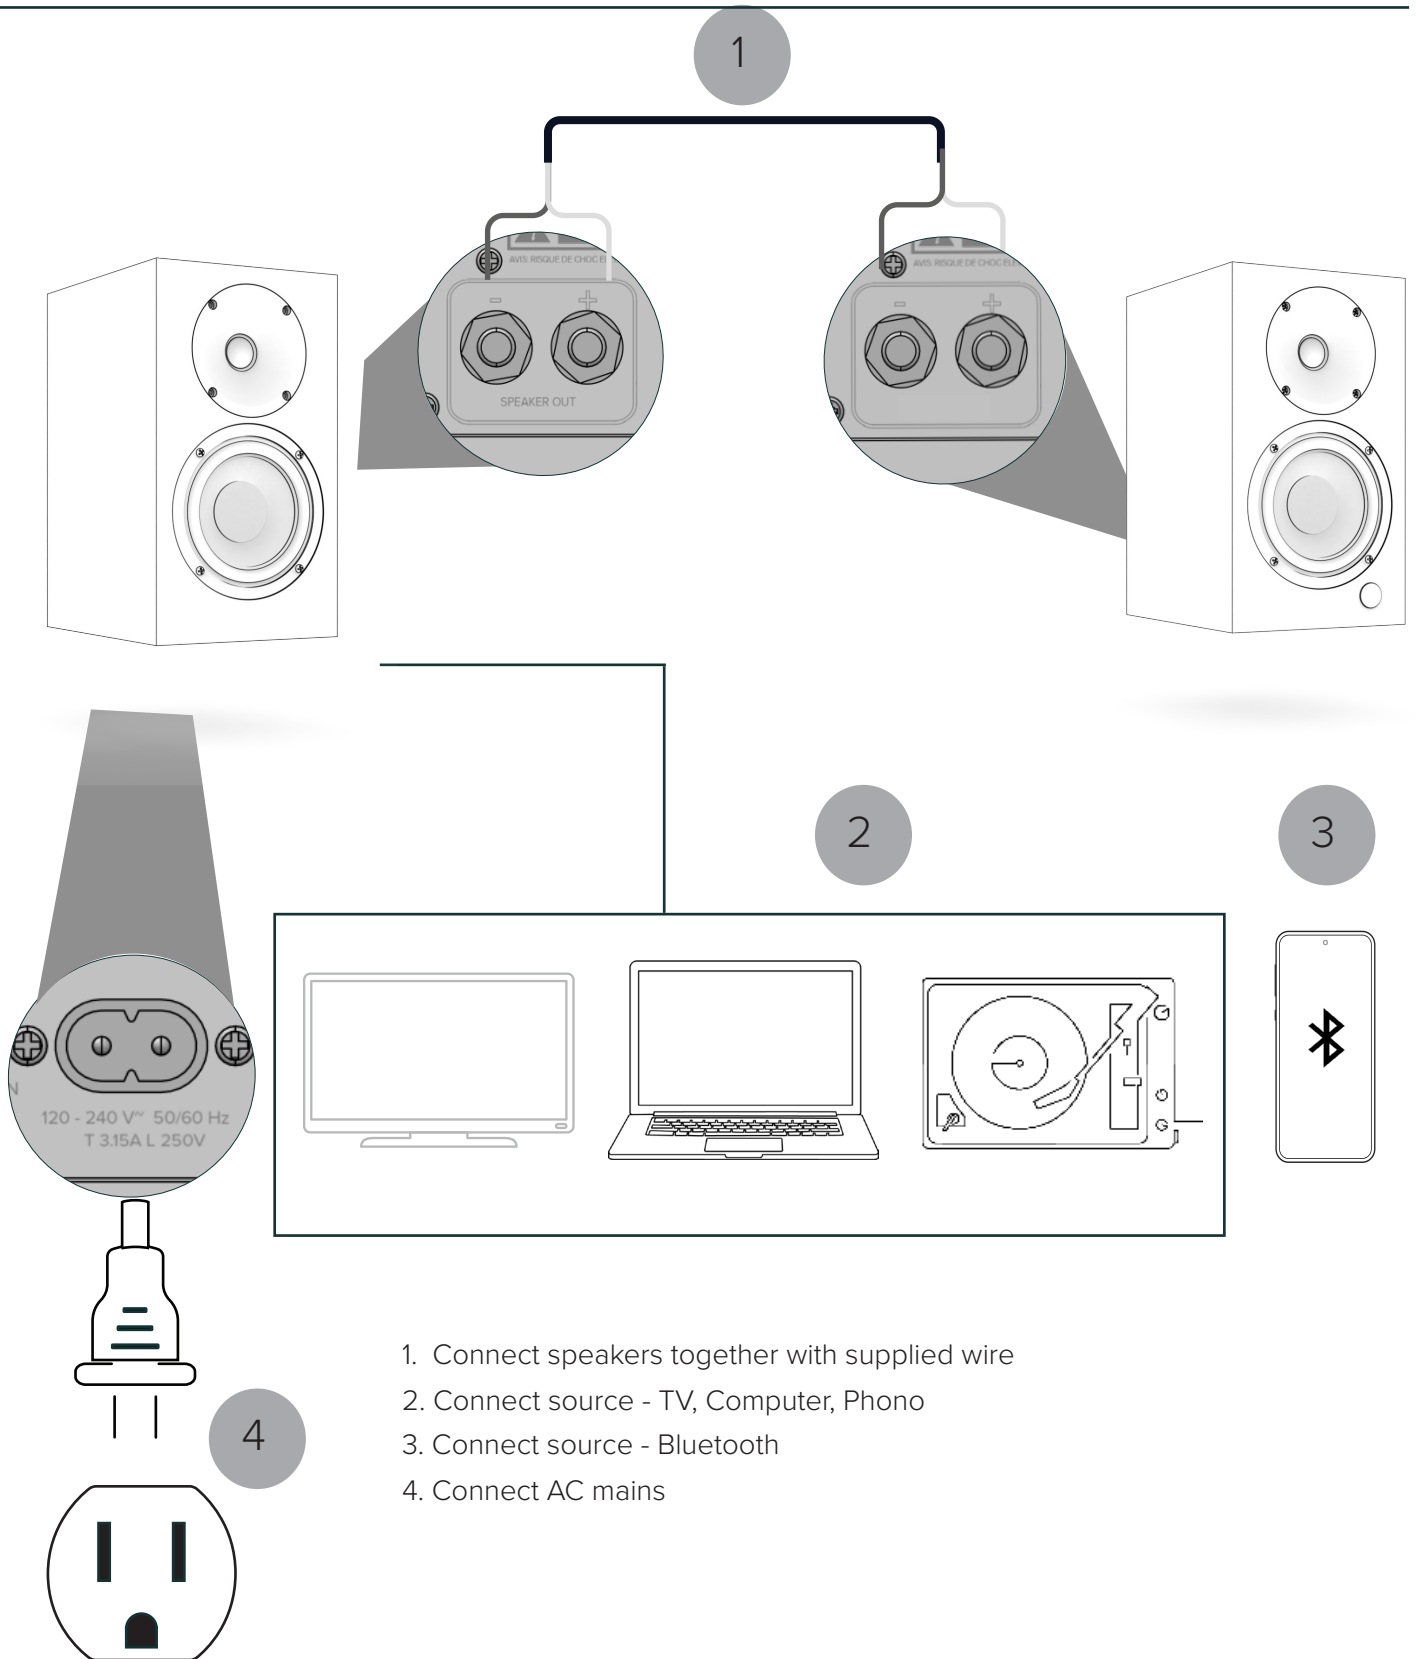


1. Connect speakers together with supplied wire
2. Connect source - TV, Computer, Phono
3. Connect source - Bluetooth
4. Connect AC mains

Controls and Inputs/Output

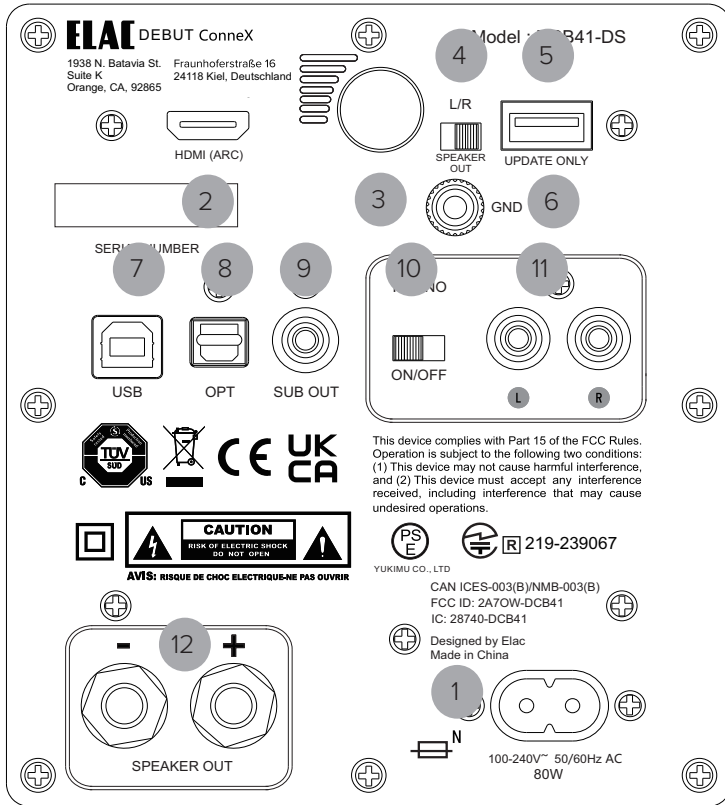

1. AC Mains Inlet
2. HDMI (ARC) Input
3. Volume/Power/Source
4. L/R switch
5. USB for Update
6. Ground Screw Terminal
7. USB Audio Input
8. Optical Input
9. Subwoofer Output
10. Phono/Line Switch
11. Phono/Line Input
12. Speaker Output

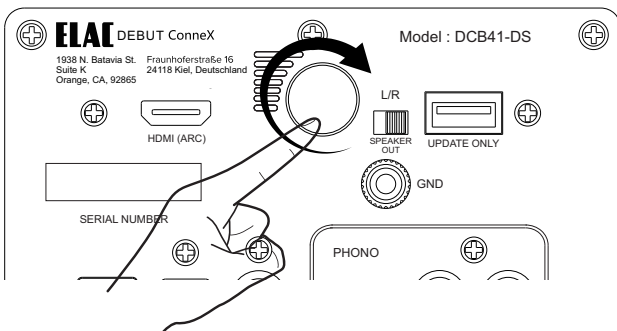

The Volume knob can be used to adjust volume, change input and power on.

Rotate:

Rotating the knob will increase or decrease volume.

Push:

Press to turn on unit.

Press and hold in BT input to initiate pairing.

Press when unit is on to change input.

Front LED colours are: [BT - Blue] [HDMI - Green] [USB - White] [Optical - Red] [Phono - Pink]

Power/Standby:

The unit will standby after 15 minutes of no use. Pressing or rotating the volume knob as well as pressing power button on remote will wake up unit.

XBASS



XBass is a proprietary circuit to boost low frequency performance.

Turn ON/OFF


Press and hold XBass button on remote for 2 seconds :
LED display will blink once for OFF
LED display will blink twice of ON

When ON - pressing XBass will cycle XBass setting.

If connecting a subwoofer, XBass can be turned OFF completely.



CONNECTIONS - TURNTABLE

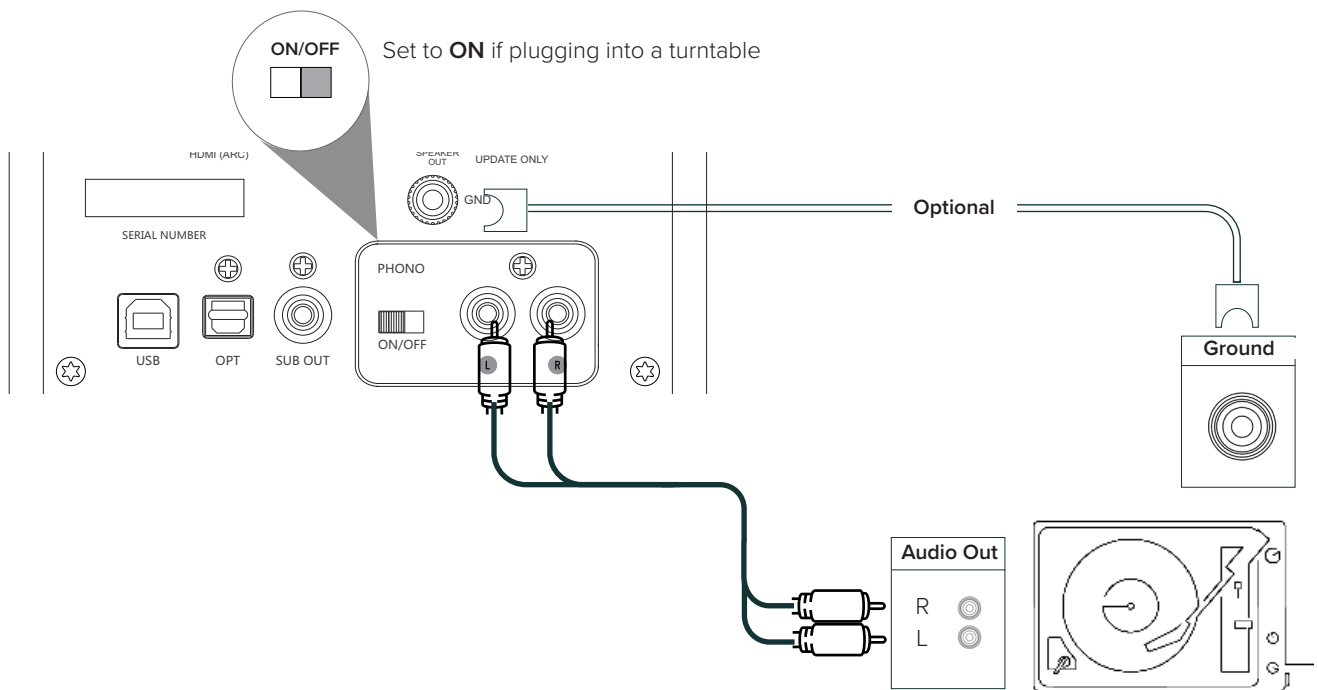


Note: Some turntables have built in phono pre-amplifiers that can be disabled. Ensure the turntable pre-amplifier is set to OFF and DCB41 is set to ON.


If you choose to use the turntable's Phono pre-amplifier, then ensure its switch is set to ON position and DCB41 is set to OFF.

The Ground connection is optional. It is recommended to be used as it can lower residual noise.




CONNECTIONS - TELEVISION

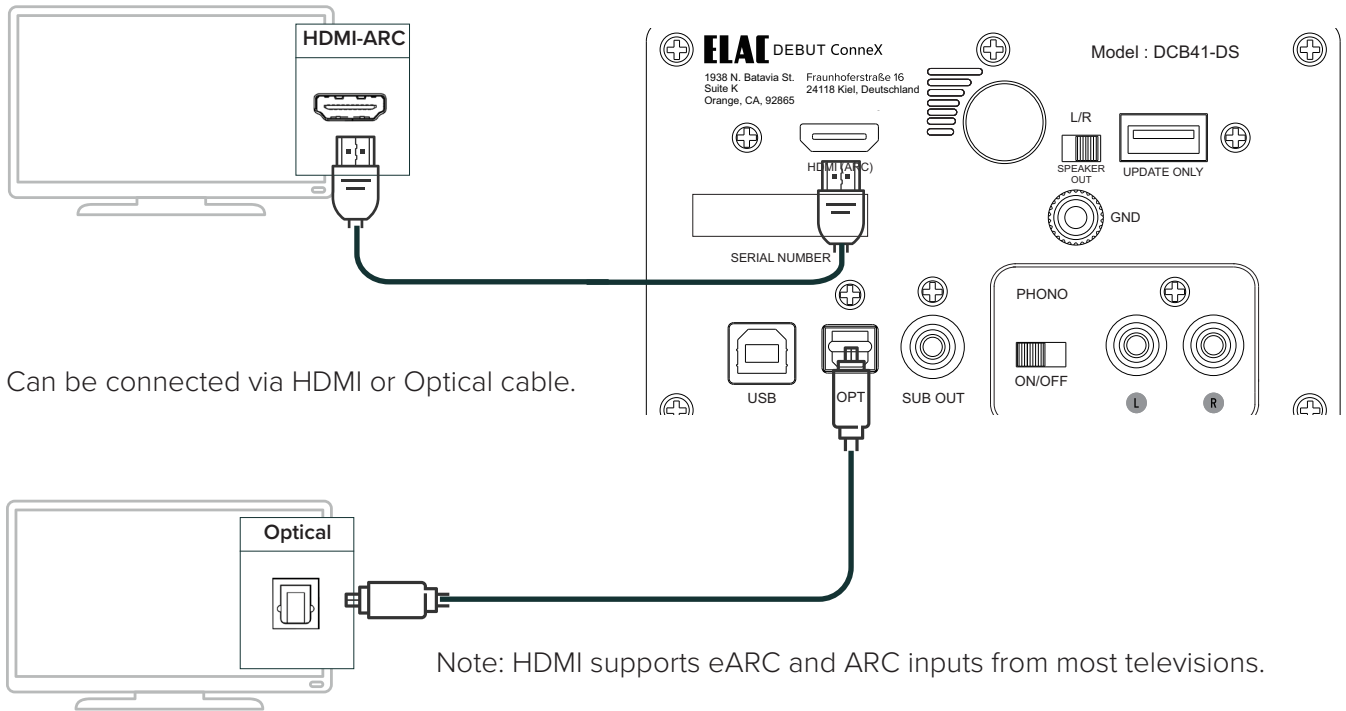

CONNECTIONS - SUBWOOFER

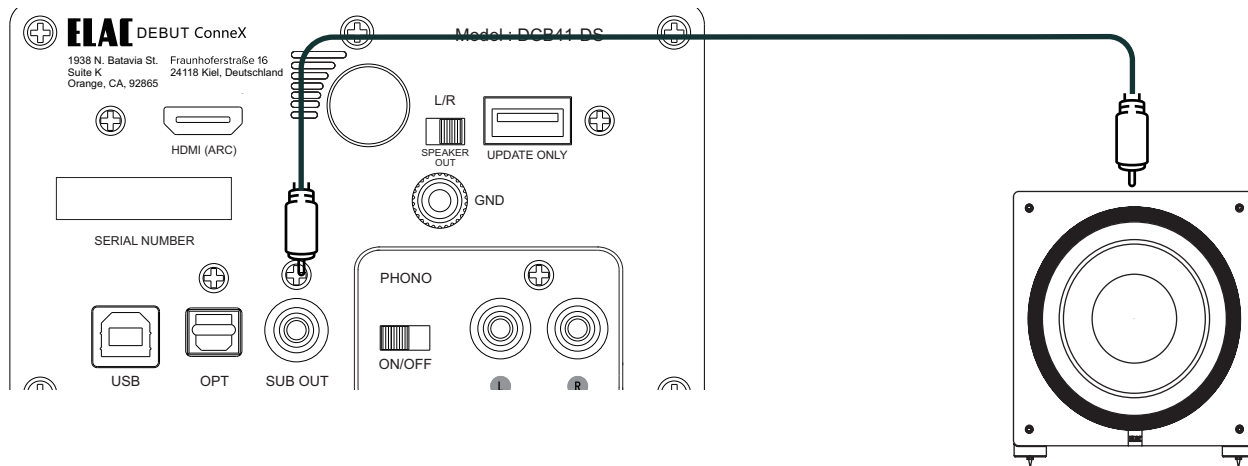

CONNECTIONS - COMPUTER

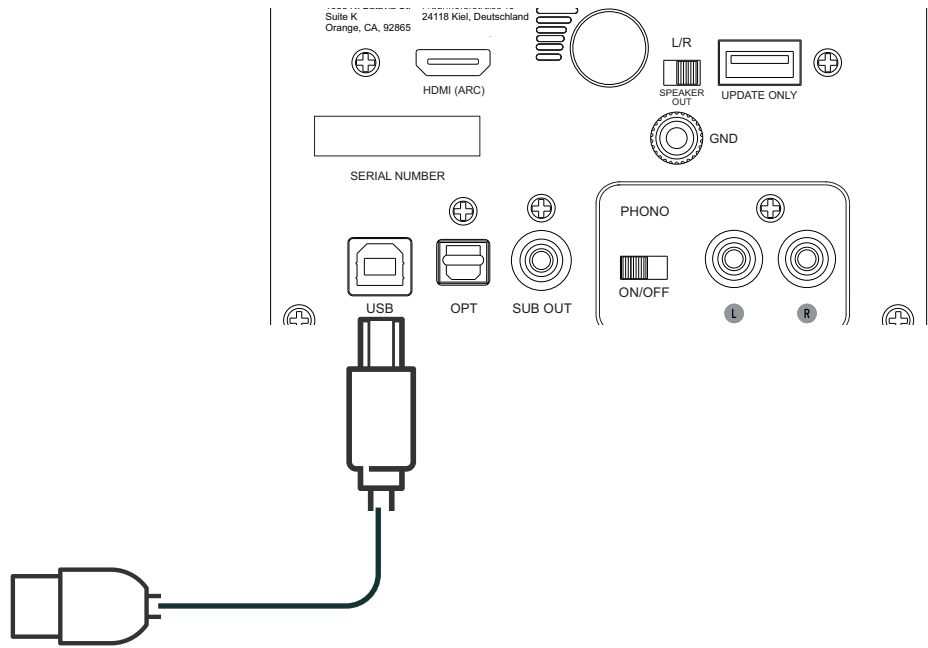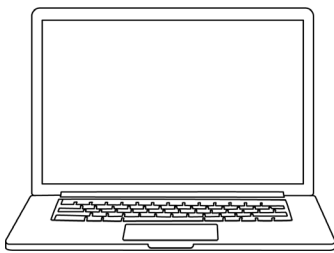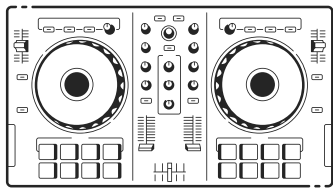

Connect to your USB devices with USB Type B cable (printer cable).

CONNECTIONS - BLUETOOTH



When initial power up - BT LED will flash if nothing is paired to it.



When LED is flashing, "ELAC DCB41" is visible on your device.

Pairing can also be initiated as follows:


Press and hold BT source on remote until LED flashes.

Press and hold rear volume button on speaker when in BT input until LED flashes.

REMOTE CONTROL

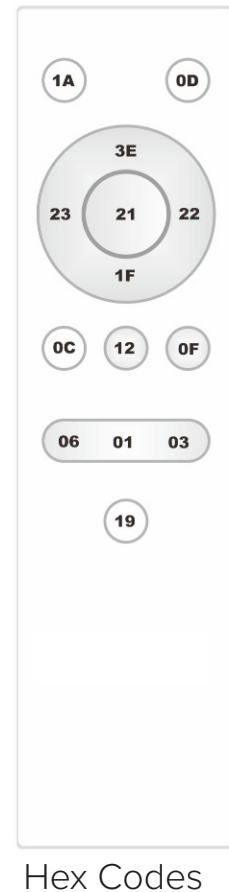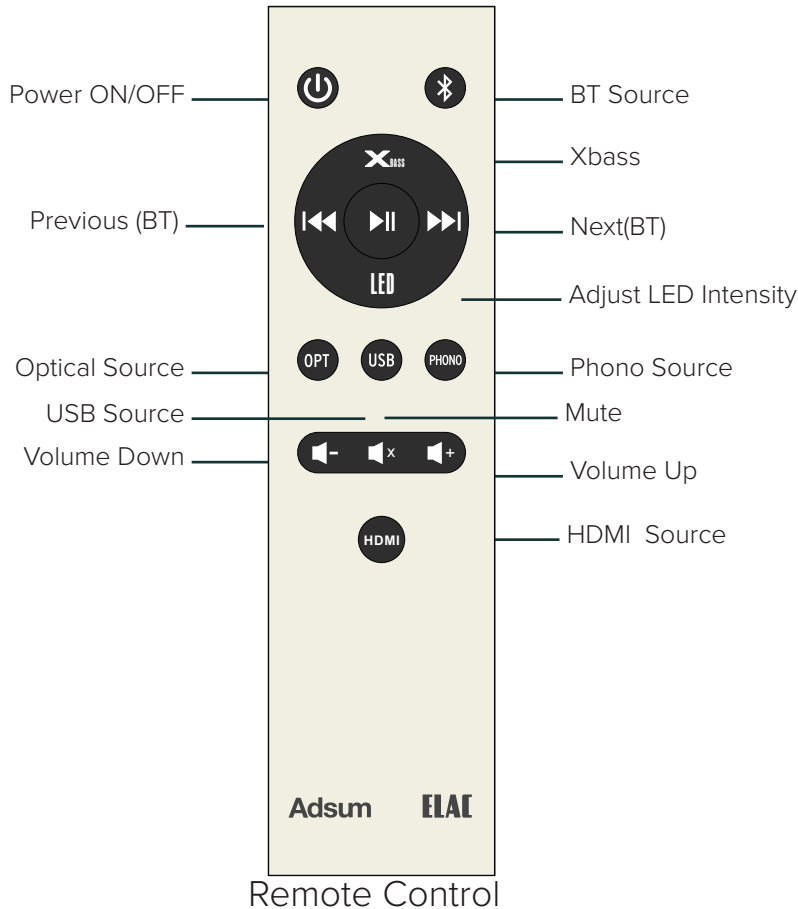


SETTING LEFT or RIGHT SPEAKER

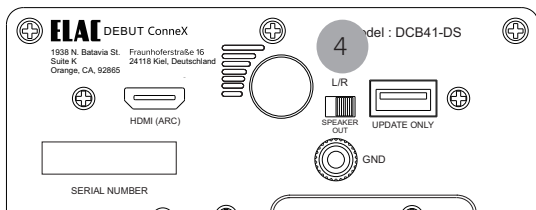

The L/R switch **4** is in reference to speaker output terminals.

If L/R switch is set to “L” then speaker output **12** will be the LEFT speaker.

If L/R switch is set to “R” then speaker output **12** will be the RIGHT speaker.

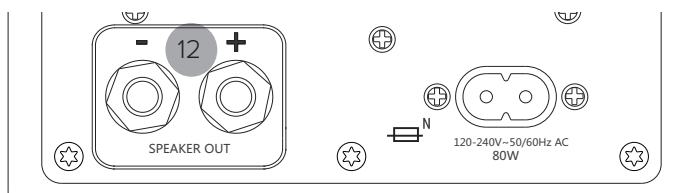

GENERAL INFORMATION

1. General information

- Please read and follow these safety instructions.
- Keep them safe for future reference.
- Observe all warnings on the speaker and in the manual. Please check the speaker for damage before use. The speaker must be in perfect working condition. Damaged parts may lead to personal injury.

2. Use only as directed

- Connect the speaker(s) according to the instructions in the manual.
- Many ELAC speakers are equipped with spikes and/or anti-slip feet. They are explicitly provided for leveling the speaker. For leveling on an uneven floor, unscrew the spikes or anti-slip feet by 2-3 turns of thread. The speaker should always be in perfect vertical alignment: the stability of the speaker must not be compromised by using spikes or anti-slip feet as the speaker may tip-over.

3. Location

- Install the speakers on a level surface only.
- When choosing the location of these speakers do not place them in locations that are:
 - In direct sunlight
 - Very humid
 - Prone to vibrations
 - Exceptionally hot or cold
 - Near CRT Televisions (the speakers are not magnetically shielded and may cause color issues with a CRT based TV).sa
 - Close to magnetic cards (Since the speakers are not magnetically shielded placing magnetic cards such as credit cards or commuter cards may cause them to fail).

4. WARNING!

Please ensure the product is perfectly stable to avoid injury from tip-over. Please note, that stability can be increased by using spikes on carpeted surfaces. However, the mounting of spikes must be carried out carefully due to their very sharp ends which may cause injuries. The stability on slippery floors can be increased by using Velcro fastening tape or double-sided adhesive tape. Do not install the speaker near any heat sources such as radiators, heating valves, stoves, or other apparatus (including amplifiers) that produce heat, or in areas where there is a risk of explosion.

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install the speaker in a closed rack or in a closed cupboard.
- Do not put burning candles on or near the speaker.
- Do not install the speaker near transformers because electromagnetic stray fields can cause hum noise on woofers.
- In combination with certain materials / lacquers / material surfaces, anti-slip feet or spike washers may cause colored imprints on the surfaces.

ELAC The life of sound.

ELAC AMERICAS INC.
1938 N. BATAVIA St. SUITE K
ORANGE, CA 92865

ELAC ELECTROACUSTIC GMBH
FRAUNHOFERSTRASSE 16
D-24118 KIEL, GERMANY